\*FM 23-34

Field Manual No. 23-24 HEADQUARTERS DEPARTMENTOF THE ARMY Washington, DC, 17 August 1994

## **TOW WEAPONS SYSTEMS**

## **CONTENTS**

|                |  | Page |
|----------------|--|------|
| Preface        |  | v    |
| CHAPTER        | 1. INTRODUCTION                                |      |
| 1-1.           | Characteristics                                | 1-1  |
| 1-2.           | System Configurations                          | 1-2  |
| 1-3.           | Missile Configurations and Types               | 1-3  |
| 1-4.           | TOW Missile Identification                     | 1-7  |
| 1-5.           | Internal Components and Sequence of Operations | 1-8  |
| 1-6.           | TOW Training Strategy                          | 1-12 |
|                |  |      |
| CHAPTER        | 2. TRIPOD-MOUNTED TOW/TOW 2                    |      |
| Section I. Op  | eration Procedures                             | 2-1  |
| 2-1.           | System Checkout                                | 2-1  |
| 2-2.           | Preventive Maintenance Checks and Services     | 2-1  |
| 2-3.           | Selection of Firing Positions                  | 2-1  |
| 2-4.           | Preparation of Missiles                        | 2-2  |
| Section II. Pe | rformance Problems and Destruction Procedures  | 2-2  |
| 2-5.           | Malfunctions                                   | 2-2  |
| 2-6.           | Firing Limitations                             |      |
| 2-7.           | Destruction of TOW Weapon Systems              |      |

DISTRIBUTION RESTRICTION: Approved for public release; distribution is unlimited.

<sup>\*</sup>This publication supersedes FM 23-34, 30 September 1987.

|             | <u>Page</u>   |
|-------------|---|
| CHAPTER     | 3. M966-MOUNTED TOW/TOW 2                               |
|             | ndividual Duties and Responsibilities                   |
| 3-1.        | Squad Leader 3-2  |
| 3-2.        | Gunner 3-2  |
| 3-3.        | Driver-Loader 3-3                                       |
|             | Operation Procedures 3-3                                |
| 3-4.        | Equipment Storage 3-3                                   |
| 3-5.        | HMMWV Interchangeable                                   |
|             | Mount System  |
| 3-6.        | Preparation of an M966 for TOW Firing                   |
| 3-7.        | Loading, Arming, and Unloading                          |
| 3-8.        | Target Engagement 3-16                                  |
| 3-9.        | Immediate Action 3-17                                   |
| 3-10.       | M220A1 Dismount   |
| 3-11.       | M220A1 Remount 3-23                                     |
| 3-12.       | M220A2 Dismount (Ready-to-Fire Configuration) 3-24      |
| 3-13.       | M220A2 Remount (Ready-to-Fire Configuration) 3-26       |
| 3-14.       | Firing Limitations 3-28                                 |
| CHAPTER     | 4. M901-SERIES IMPROVED TOW VEHICLE                     |
|             | ndividual Duties and Responsibilities                   |
| 4-1.        | Squad Leader  |
| 4-2.        | Gunner 4-3  |
| 4-3.        | Loader  |
| 4-4.        | Driver  |
| Section II. | Operation Procedures 4-4                                |
| 4-5.        | Characteristics 4-4                                     |
| 4-6.        | Installation of an M220-Series TOW Launcher and Encased |
|             | Missiles 4-5  |
| 4-7.        | Preparation of an M901-Series ITV for TOW Firing 4-5    |
| 4-8.        | Target Engagement 4-10                                  |
| 4-9.        | Immediate Action 4-12                                   |
| 4-10.       | Reloading 4-12  |
| 4-11.       | Emergency Action 4-13                                   |
| 4-12.       | Dismount and Remount 4-15                               |
| 4-13.       | Evacuation 4-16   |
| 4-14.       | M60 Machine Gun Operation 4-16                          |
| 4-15.       | Squad Leader's Periscope Operation 4-19                 |
| 4-16.       | M243 Smoke Grenade Launcher Operation 4-23              |
| 4-17.       | Firing Limitations 4-26                                 |
| 4-18.       | Operational Checklist and Troubleshooting for           |
|             | M901-Series 4-42  |

|                           | <u> </u>  | age  |
|---------------------------|---|------|
| CHAPTER !                 | 5. TOW TRAINING PROGRAM                         |      |
| -                         | aining Assessment and Planning                  | 5-1  |
| 5-1.                      | Commander's Responsibility                      |      |
| 5-1.<br>5-2.              | Sustainment Training and Evaluation             |      |
| 5-2.<br>5-3.              | TOW Training Guidelines                         |      |
| 5-4.                      | TOW Gunnery Tables                              |      |
| 5 <del>-</del> 7.<br>5-5. | Conduct of Unit TOW Training                    |      |
| 5-6.                      | Collective Training                             |      |
|                           | DW Training Phases                              |      |
| 5-7.                      | Phase I: Individual Training                    |      |
| 5 7.<br>5-8.              | Phase II: Squad Training                        |      |
| 5-9.                      | Phase III: Section Training                     |      |
| 5-10.                     | Phase IV: Platoon Training                      |      |
| 5-10.<br>5-11.            | Field Tracking                                  |      |
| 5-11.                     | rield tracking                                  | 1-40 |
| CHAPTER 6                 | 6. COMBAT TECHNIQUES OF FIRE                    |      |
| Section I. Fire           | e Control Measures                              | 6-1  |
| 6-1.                      | Target Engagement Determination                 | 6-1  |
| 6-2.                      | Fire Commands                                   |      |
| 6-3.                      | Target Tracking                                 | 6-9  |
| 6-4.                      | Target Engagement with the M220A1 (Basic TOW)6  | i-10 |
| 6-5.                      | Target Engagement with the M220A2 (TOW 2)6      | 5-12 |
| Section II. He            | elicopter Engagement6                           | 5-13 |
| 6-6.                      | Operational Concept6                            | i-13 |
| 6-7.                      | Gunnery Training6                               | -14  |
| Section III. N            | BC and Limited Visibility Conditions 6          | 5-14 |
| 6-8.                      | Decontamination                                 |      |
| 6-9.                      | Thermal Target Recognition, Identification, and |      |
|                           | Engagement6                                     | 5-14 |
| 6-10.                     | Effects of Weather and Obscurants6              |      |
| 6-11.                     | Compensation for Target Appearance Variables 6  |      |
| 6-12.                     | Battlefield Identification                      |      |
| 6-13.                     | Primary Recognition Cues6                       |      |
| Section IV. E             | lectro-optical Countermeasures6                 |      |
| 6-14.                     | TOW Launcher                                    |      |
| 6-15.                     | TOW 2 Launcher6                                 |      |
|                           |   |      |
| APPENDIX                  | A. SAFETY                                       | 4-1  |
| APPENDIX                  | B. TOW TRAINING DEVICES                         | B-1  |
| APPENDIX                  | C. MULTIPURPOSE RANGE COMPLEXES                 | C-1  |
| APPENDIX                  | D. FIGHTING POSITIONS                           | D-1  |

| <u>Page</u>  |
|--|
| APPENDIX E. STANDARD RANGE CARD E-1  |
| APPENDIX F. THREAT COUNTERPART SYSTEMS F-1                                   |
| APPENDIX G. TOW TRAINING TIPS  |
| APPENDIX H. TRAIN-THE-TRAINER PROGRAMH-1                                     |
| APPENDIX I. IDENTIFY COMBAT VEHICLESI-1                                      |
| APPENDIX J. DISMOUNTING AND REMOUNTING A TOW LAUNCHER SYSTEM ON AN M2/M3 BTV |
| GLOSSARYGlossary-1   |
| REFERENCESReferences-1   |
| INDEXIndex-1   |